

# Autonics ROTARY ENCODER(INCREMENTAL TYPE) E30S4 SERIES

## INSTRUCTION MANUAL



Thank you for choosing our Autonics product.  
Please read the following safety considerations before use.

### ■ Safety Considerations

- ☒ Please observe all safety considerations for safe and proper product operation to avoid hazards.
- ☒ ⚠ symbol represents caution due to special circumstances in which hazards may occur.
- ⚠ **Warning** Failure to follow these instructions may result in serious injury or death.
- ⚠ **Caution** Failure to follow these instructions may result in personal injury or product damage.

### ⚠ Warning

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss.** (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)  
Failure to follow this instruction may result in fire, personal injury, or economic loss.
- Install on a device panel to use.**  
Failure to follow this instruction may result in fire.
- Do not connect, repair, or inspect the unit while connected to a power source.**  
Failure to follow this instruction may result in fire.
- Check 'Connections' before wiring.**  
Failure to follow this instruction may result in fire.
- Do not disassemble or modify the unit.**  
Failure to follow this instruction may result in fire.

### ⚠ Caution

- Use the unit within the rated specifications.**  
Failure to follow this instruction may result in fire or product damage.
- Do not short the load.**  
Failure to follow this instruction may result in product damage by fire.
- Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.**  
Failure to follow this instruction may result in fire or explosion.
- Do not use the unit near the place where there is the equipment which generates strong magnetic force or high frequency noise and strong alkaline, strong acidic exists.**  
Failure to follow this instruction may result in product damage.

### ■ Ordering Information

E30S	4	3000	3	N	24	
Series	Shaft diameter	Pulses/Revolution	Output phase	Output	Power supply	Cable
Diameter Ø30mm, shaft type	Ø4mm	100, 200, 360, 500, 1000, 1024, 3000	3: A, B, Z 6: A, Ā, B, B̄, Z, Z̄	T: Totem pole output N: NPN open collector output V: Voltage output L: Line driver output	5: 5VDC ±5% 24: 12-24VDC ±5%	No mark : Axial cable type O(☒) : Axial cable connector type
☒ Standard : E30S4-PULSE-3-N-24			☒ Stavndard : A, B, Z	☒ The power of Line driver is only for 5VDC		☒ Cable length : 250mm


☒ The above specifications are subject to change and some models may be discontinued without notice.  
☒ Be sure to follow cautions written in the instruction manual, and the technical descriptions (catalog, homepage).

### ■ Specifications


Item	Ø30mm Shaft type Incremental Rotary encoder	
Resolution(PPR)	100, 200, 360, 500, 1000, 1024, 3000 (Not indicated type is available to customize)	
Output phase	Output between A and B phase: $\frac{T}{4} \pm \frac{T}{8}$ (T=1cycle of A phase)	
Control output	Totem pole output	• Low - Load current: Max. 30mA, Residual voltage: Max. 0.4VDC=
	NPN open collector output	• High - Load current: Max. 10mA, Output voltage(Power voltage 5VDC=); Min. (Power voltage-2.0)VDC=, Output voltage(Power voltage 12-24VDC=); Min. (Power voltage-3.0)VDC=
	Voltage output	Load current: Max. 30mA, Residual voltage: Max. 0.4VDC=
	Line driver output	• Low - Load current: Max. 20mA, Residual voltage: Max. 0.5VDC=
Response time (Rise/Fall)	Totem pole output	Max. 1µs
	NPN open collector output	Max. 1µs
	Voltage output	Max. 1µs(5VDC=); Output resistance 820Ω, Max. 2µs(12-24VDC=); Output resistance 4.7kΩ
	Line driver output	Max. 0.5µs
Electrical specification	Max. Response frequency	300kHz
	Power supply	5VDC= ±5%, 12-24VDC= ±5%
	Current consumption	Max. 80mA(disconnection of the load), Line driver output:Max. 50mA(disconnection of the load)
	Insulation resistance	Min. 100MΩ(at 500VDC)
	Dielectric strength	750VAC 50/60Hz for 1 minute(Between all terminals and case)
	Connection	Axial cable type, Axial cable connector type
Mechanical specification	Starting torque	Max. 20gf·cm(0.002N·m)
	Moment of inertia	Max. 20g·cm <sup>2</sup> (2×10 <sup>-6</sup> kg·m <sup>2</sup> )
	Shaft loading	Radial : Max. 2kgf, Thrust : Max. 1kgf
Vibration	Max. allowable revolution <sup>※1</sup>	5000rpm
	Vibration	1.5mm amplitude at frequency of 10 to 55Hz in each of X, Y, Z directions for 2 hours
Shock	Max. 50G	
Environ-ment	Ambient temperature	-10 to 70°C(at non-freezing status), Storage : -25 to 85°C
	Ambient humidity	35 to 85%RH, Storage : 35 to 90%RH
Protection	IP50(IEC specification)	
Cable	Ø5mm, 5-wire(Line driver output:8-wire), Length:2m, Shield cable	
Accessory	Ø4mm coupling	
Approval	CE (Except Line driver output)	
Weight	Approx. 80g	

☒1: Max. allowable revolution/Max. response revolution (Max. response revolution(rpm) / Max. response frequency ×60 sec) / Resolution  
Please select the resolution to make lower max. revolution than max. allowable revolution.

### ■ Dimensions

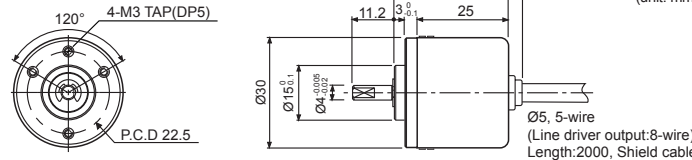


### ■ Control Output Diagram

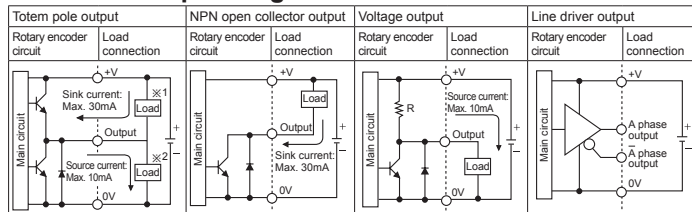


- The output circuit of A, B, Z phase are the same.(Line driver output is A, Ā, B, B̄, Z, Z̄)  
- Totem pole output can be used for NPN open collector type(☒1) or voltage output type(☒2).

### ■ Connections

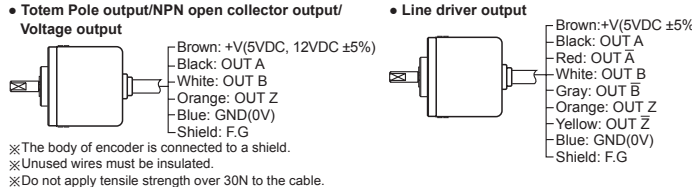


### ■ Accessory

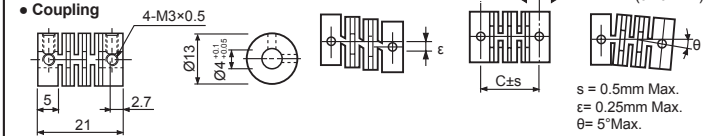

- ☒ It must not use larger shaft loading than specification.
- ☒ Do not put strong impact when insert a coupling into shaft.
- ☒ Failure to follow this instruction may result in product damage.
- ☒ Fix the unit or a coupling by a wrench under 0.15 N·m of torque.
- ☒ When you install this unit, if eccentricity and deflection angle are larger, it may shorten the life cycle of this unit.

### ■ Output Waveform

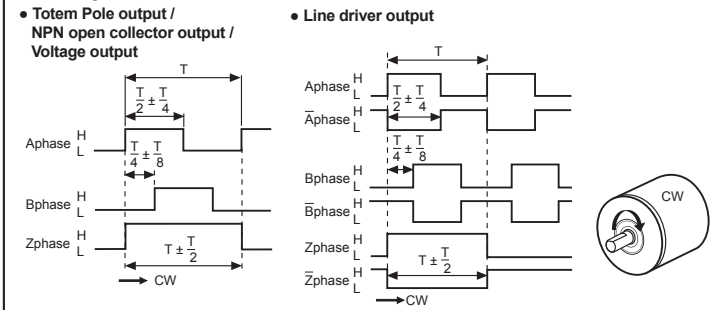

### ■ Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, It may cause unexpected accidents.
- 5VDC, 12-24VDC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- For using the unit with the equipment which generates noise (switching regulator, inverter, servo motor, etc.), ground the shield wire to the F.G. terminal.
- Ground the shield wire to the F.G. terminal.
- When using switching mode power supply, frame ground (F.G.) terminal of power supply should be grounded.
- Wire as short as possible and keep away from high voltage lines or power lines, to prevent inductive noise.
- For Line driver unit, use the twisted pair wire which is attached seal and use the receiver for RS-422A communication.
- Check the wire type and response frequency when extending wire because of distortion of waveform or residual voltage increment etc by line resistance or capacity between lines.
- This unit may be used in the following environments.
  - Indoors (in the environment condition rated in 'Specifications')
  - Altitude max. 2,000m
  - Pollution degree 2
  - Installation category II

### ■ Major Products

- Photoelectric Sensors
- Fiber Optic Sensors
- Door Sensors
- Door Side Sensors
- Area Sensors
- Proximity Sensors
- Pressure Sensors
- Rotary Encoders
- Connector/Sockets
- Switching Mode Power Supplies
- Control Switches/Lamps/Buzzers
- I/O Terminal Blocks & Cables
- Stepper Motors/Drivers/Motion Controllers
- Graphic/Logic Panels
- Field Network Devices
- Laser Marking System (Fiber, CO<sub>2</sub>, Nd: YAG)
- Laser Welding/Cutting System
- Temperature Controllers
- Temperature/Humidity Transducers
- SSRs/Power Controllers
- Counters
- Timers
- Panel Meters
- Tachometer/Pulse (Rate) Meters
- Display Units
- Sensor Controllers

**Autonics Corporation**  
http://www.autonics.com

☒ HEADQUARTERS:  
18, Bansong-ro 513 beon-gil, Haeundae-gu, Busan, South Korea, 48002  
TEL: 82-51-519-3232  
☒ E-mail: sales@autonics.com