## **Autonics ROTARY ENCODER (INCREMENTAL TYPE)** E50S SERIES

INSTRUCTION MANUAL



Thank you for choosing our Autonics product. Please read the following safety considerations before use.

### Safety Considerations

- XPlease observe all safety considerations for safe and proper product operation to avoid
- ★▲ symbol represents caution due to special circumstances in which hazards may occur.

**Warning** Failure to follow these instructions may result in serious injury or death.

▲ Caution Failure to follow these instructions may result in personal injury or product damage.

### **▲** Warning

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipm ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)
  Failure to follow this instruction may result in fire, personal injury, or economic loss.
- 2. Install on a device panel to use.
- Failure to follow this instruction may result in fire.

  3. Do not connect, repair, or inspect the unit while connected to a power source. Failure to follow this instruction may result in fire.

- 4. Check 'Connections' before wiring.
  Failure to follow this instruction may result in fire.

  5. Do not disassemble or modify the unit.
- Failure to follow this instruction may result in fire

### **▲** Caution

- Use the unit within the rated specifications.
- Failure to follow this instruction may result in fire or product damage.
- Failure to follow this instruction may result in product damage by fire.
- 3. Do not use the unit in the place where flammable/explosive/corrosive gas, humidity direct sunlight, radiant heat, vibration, impact, or salinity may be present. Failure to follow this instruction may result in fire or explosion.
- 4. Do not use the unit near the place where there is the equipment which generates strong
- magnetic force or high frequency noise and strong alkaline, strong acidic exists Failure to follow this instruction may result in product damage.

#### Ordering Information

	E50S 8 - 8000 - 3 - N - 24 -						
	Series		Pulse/ 1Revolution	Output phase	Control output	Power supply	Cable
	Diameter Ø50mm, shaft type	Ø8mm	Refer to resolution	2: A, B 3: A, B, Z 4: A, A, B, B 6: A, A, B, B, Z Z, Z	T: Totem pole output N: NPN open collector output V: Voltage output L: Line driver output	5: 5VDC±5% 24: 12-24VDC ±5%	No mark: Axial cable type C: Axial cable connector type (X) CR: Axial connector type CS: Radial connector type
XStandard: E50S8-PULSE-3-N-24							※Cable length: 250mm

Standard: E50S8-PULSE-3-N-24 ■ Control Output Diagram

## Totem pole output NPN open collector output Rotary encoder circuit Sink current: Max. 30mA Load Output Output Voltage output Line driver output Load connection

\*\*All output circuits of A. B. Z phase are the same. (line driver output is A. A. B. B. Z. Z)

Output

Load

- \*Totem pole output type can be used for NPN open collector type (\*\*1) or voltage output type (\*\*2). \*The above specifications are subject to change and some models may be discontinued
- without notice.

  \*\*Be sure to follow cautions written in the instruction manual, and the technical descriptions

### Specifications

- openiousione							
Item			Diameter Ø50mm shaft type of incremental rotary encoder				
		Totem pole output		E50S83-T			
	<u>e</u>	NPN open o	collector output	E50S83-N			
	Model	Voltage output		E50S83-V			
	[	Line driver output		E50S86-L			
Re	soluti	solution (PPR) <sup>×1</sup>		*1, *2, *5, 10, 12, 15, 20, 23, 25, 30, 35, 40, 45, 50, 60, 75, 100, 120, 125, 150, 192, 200, 240, 250, 256, 300, 360, 400, 500, 512, 600, 800, 1000, 1024, 1200, 1500, 1800, 2000, 2048, 2500, 3000, 3600, 4000, 5000, 6000, 6000, 8000			
	-	Output phase		A, B, Z phase (line driver output: A, $\overline{A}$ , B, $\overline{B}$ , Z, $\overline{Z}$ phase)			
		Phase difference of output		Output between A and B phase: $\frac{T}{4} \pm \frac{T}{8}$ (T=1cycle of A phase)			
			Totem pole output	Low   - Load current: Max. 30mA, Residual voltage: MAax. 0.4VDC::   Fligh] - Load current: Max. 30mA, Residual voltage: MAax. 0.4VDC::   Fligh] - Load current: Max. 30mA, Output voltage (power voltage 12-24VDC::): Min. (power voltage-3.0)VDC::   Max. 10mA, Output voltage (power voltage 12-24VDC::): Min. (power voltage-3.0)VDC::   Max. 10mA, Output voltage (power voltage 12-24VDC::): Min. (power voltage-3.0)VDC::   Max. 10mA, Output voltage (power vo			
		Control output	NPN open collector output	Load current: Max. 30mA, Residual voltage: Max. 0.4VDC=			
		output	Voltage output	Load current: Max. 10mA, Residual voltage: Max. 0.4VDC=			
<u> </u>	specification		Line driver output	• [Low] - Load current: Max. 20mA, Residual voltage: Max. 0.5VDC::- • [High] - Load current: Max20mA, Output voltage (power voltage (power voltage (power voltage 12-24VDC::-): Min. (power voltage-3.0)VDC::-			
1	<u>i</u>	_	Totem pole output				
🛎	be	Response time	NPN open collector output	Max. 1µs (cable length: 2m, I sink=20mA)			
	S	(rise/fall)	Voltage output				
			Line driver output	Max. 0.5µs (cable length: 2m, I sink=20mA)			
		Max. Response frequency		300kHz			
		Power supp	-	5VDC= ±5% (ripple P-P: Max. 5%)     12-24VDC= ±5% (ripple P-P: Max. 5%)			
	1	Current consumption		Max. 80mA (disconnection of the load), Line driver output: Max. 50mA (disconnection of the load)			
		Insulation resistance		Over. 100M $\Omega$ (at 500VDC megger between all terminals and case)			
	-	Dielectric strength		750VAC 50/60Hz for 1 minute (between all terminals and case)			
l L	-	Connection		Axial cable type, Axial cable connector type, Axial/Radial connector type			
<u> </u>	:.≃ ⊦			Max. 70gf-cm (0.007N-m) <sup>3/2</sup> , Max. 800gf-cm (0.078N-m) <sup>3/3</sup>			
i	licat			Max. 80g-cm² (8×10 <sup>6</sup> kg-m²) <sup>82</sup> , Max. 400g-cm² (4×10 <sup>6</sup> kg-m²) <sup>83</sup>			
1	9			Radial: Max. 10kgf, Thrust: Max. 2.5kgf			
_	ਲੇ Max. allowable revolution <sup>ж4</sup>		able revolution**	5,000rpm			
_	ratio	ation		1.5mm amplitude at frequency of 10 to 55Hz in each X, Y, Z direction for 2 hours			
Sh	nock			Approx. Max. 75G			
<sub>En</sub>	viron	ment	Ambient temperature	-10 to 70°C, Storage: -25 to 85°C			
l L	A		Ambient humidity	35 to 85% RH, Storage: 35 to 90%RH			
Pro	otecti			Axial cable type, Axial cable connector type: IP50 (IEC standards) <sup>x5</sup> , Axial/Radial connector type: IP65 (IEC standards)			
Ca	ble			Ø5mm, 5-wire, Length: 2m, Shield cable (line driver output: Ø5mm, 8-wire) (AWG 24, Core diameter: 0.08mm, Number of cores: 40, Insulator diameter: Ø1mm)			
Ac	cesso	ory		Ø8mm coupling, Bracket			
Ap	prova	val					
We	eight®	K6		Approx. 363g (approx. 275g), Axial/Radial connector type: Approx. 268g (approx. 180g)			

\*\*1: "" pulse is only for A, B phase. (but Line driver output: A, Ā, B, B phase) Not indicated resolutions are customizable.
\*\*2: This value is for Axial cable type, Axial cable connector type (protection structure: IP50).
\*\*3: This value is for Axial cable type, Axial cable connector type (protection structure: IP64), Axial/Radial connector type (protection structure: IP65).

- \*4: Make sure that Max. response revolution should be lower than or equal to max. allowable revolution when selecting the resolution


[Max. response revolution (rpm)= Max. response frequency × 60 sec]


- **%6:** The weight includes packaging. The weight in parentheses is for unit only. **XEnvironment resistance** is rated at no freezing or condensation.

#### Dimensions

#### Axial cable type, Axial cable connector type (IP50)


Axial cable type. Axial cable connector type (IP64)

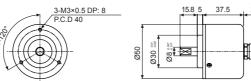

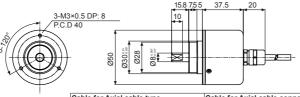


Cable for Axial cable connector type Cable for Axial cable type Ø5, 5-wire (line driver output: 8-wire), Length: 2000mm, Shield cable Ø5, 5-wire (line driver output: 8-wire), Length: 250mm, Shield cable


#### Axial connector type

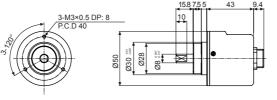


#### Radial connector type

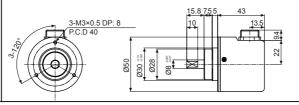


# ⊚Bracket 20 15

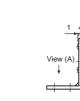

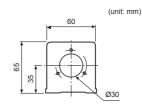

#### 

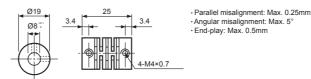


\*Do not load overweight on the shaft.

\*\*Do not put strong impact when insert a coupling into shaft.
Failure to follow this instruction may result in product damage.
\*\*Fix the unit or a coupling by a wrench under 0.15 N m of torque.
\*When you install this unit, if eccentricity and deflection angle are larger, it may shorten the life cycle of this unit.

#### Connector cable (sold separately) •CID6S-2, CID6S-5, CID6S-10, CID6S-15

(Totem pole output/NPN open collector output/Voltage output)

### •CID9S-2, CID9S-5, CID9S-10, CID9S-15

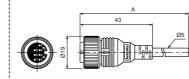



	CID6S-2		2m
	CID6S-5	Totem pole output NPN open collector output	5m
1	CID6S-10	Voltage output	10m
	CID6S-15	Totago output	15m
П	CID9S-2	Line driver output	2m
H	CID9S-5		5m
	CID9S-10	Line driver output	10m
	CID9S-15		15m

Model Control output

### Connections

#### Axial cable type

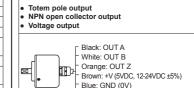


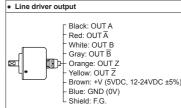


XUnused wires must be insulated \*The metal case and shield cable of encoder should

be grounded (F.G.).

\*\*Do not apply tensile strength over 30N to the

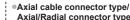

Totem pole output

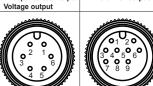

in No.	Function	Cable color	Pin No.	Function	Cable color
	OUTA	Black	1	OUTA	Black
	OUT B	White	2	OUTĀ	Red
	OUTZ	Orange	3	+V	Brown
	+V	Brown	4	GND	Blue
	GND	Blue	5	OUTB	White
	F.G.	Shield	6	OUT B	Gray
			7	OUTZ	Orange
			8	OUTZ	Yellow
			9	F.G.	Shield

F.G. (Field Ground): It should be grounded

### Output Waveforms

• Totem pole output/

NPN open collector output/ Voltage output Z phase  $T \pm \frac{T}{2}$ → Clockwise (CW)

 Line driver output Clockwise (CW)

## Cautions during Use

- 1. Follow instructions in 'Cautions during Use'. Otherwise, It may cause unexpected accidents.
  2. 5VDC, 12-24VDC power supply should be insulated and limited voltage/current
- or Class 2, SELV power supply device.
- 3. For using the unit with the equipment which generates noise (switching regulator, inverter, servo motor, etc.), ground the shield wire to the F.G. terminal.
- 4. Ground the shield wire to the F.G. terminal.
- 5. When using switching mode power supply, frame ground (F.G.) terminal of power supply should be grounded.
- 6. Wire as short as possible and keep away from high voltage lines or power lines, to prevent inductive noise.
- 7. For Line driver unit, use the twisted pair wire which is attached seal and use the receiver for RS-422A communication.
- 8. Check the wire type and response frequency when extending wire because of distortion of waveform or residual voltage increment etc by line resistance or capacity between
- 9. This unit may be used in the following environments. ①Indoors (in the environment condition rated in 'Specifications')
- ②Altitude max. 2,000m
- ③Pollution degree 2 (4) Installation category II

### **■** Major Products

- Photoelectric Sensors Temperature Controllers ■ Fiber Optic Sensors ■ Temperature/Humidity Transducers
- Door Sensors
- SSRs/Power Controllers ■ Door Side Sensors ■ Counters Area Sensors
- Proximity Sensors ■ Panel Meters ■ Tachometer/Pulse (Rate) Meters Pressure Sensors
- Rotary Encoders
   Connector/Sockets ■ Display Units ■ Sensor Controllers
- Switching Mode Power Supplies
- Control Switches/Lamps/Buzzers ■ I/O Terminal Blocks & Cables
- Stepper Motors/Drivers/Motion Controllers
- Graphic/Logic Panels
- Field Network Devices
- Laser Marking System (Fiber, CO₂, Nd; YAG) ■ Laser Welding/Cutting System

# 18, Bansong-ro 513 beon-gil, Haeundae-gu, Busan, South Korea, 48002 TEL: 82-51-519-3232

**Autonics** Corporation

DRW171369AA